
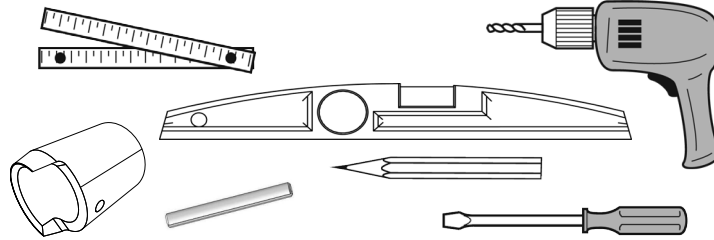
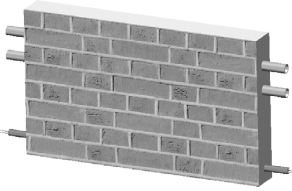









# 40018749

Instructions de montage originales 07/01/19 PVA



Les cotes **H** et **L** sont à vérifier sur l'appareil **avant** de commencer la procédure de pose.

L	H
517	1227
517	1723
617	1871
717	2019

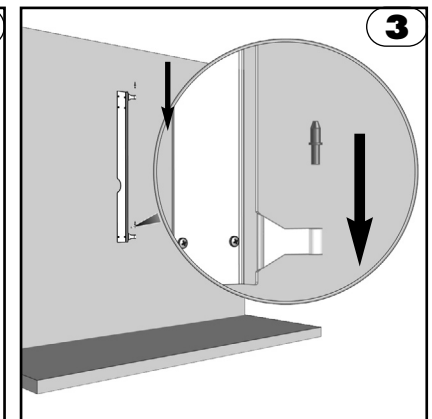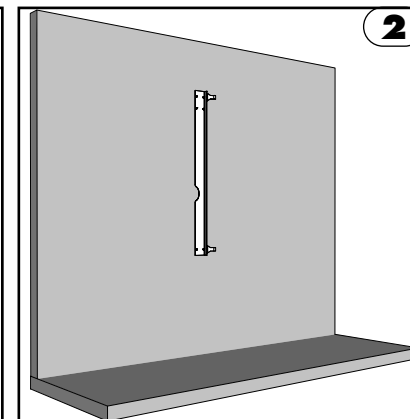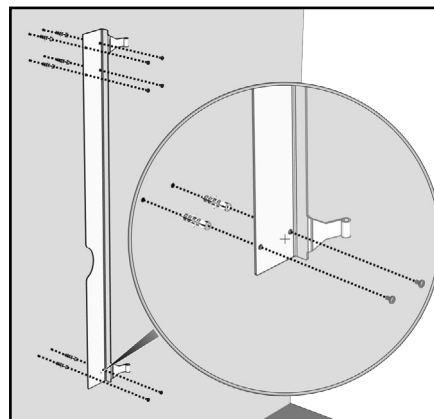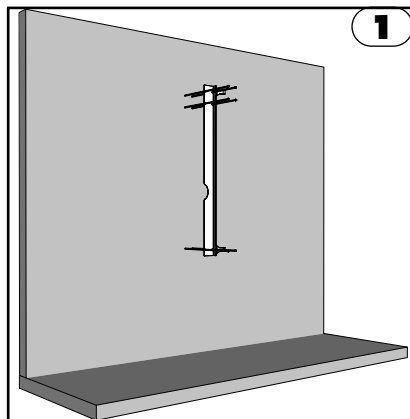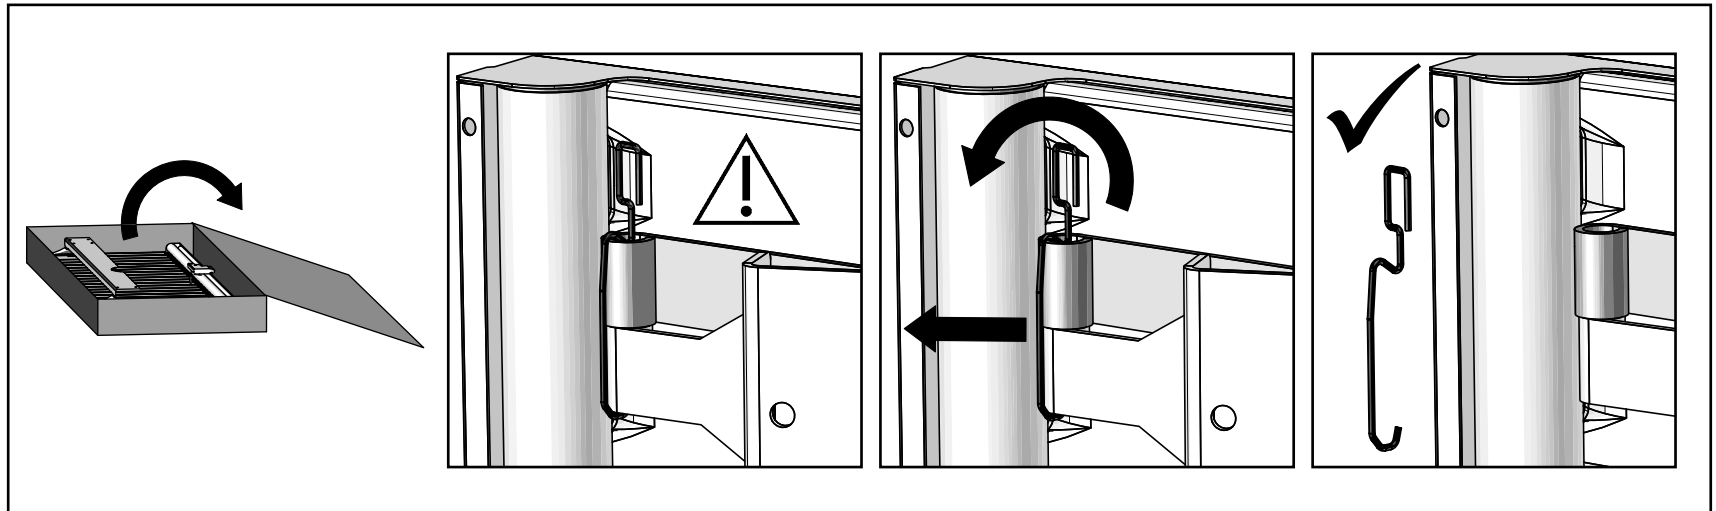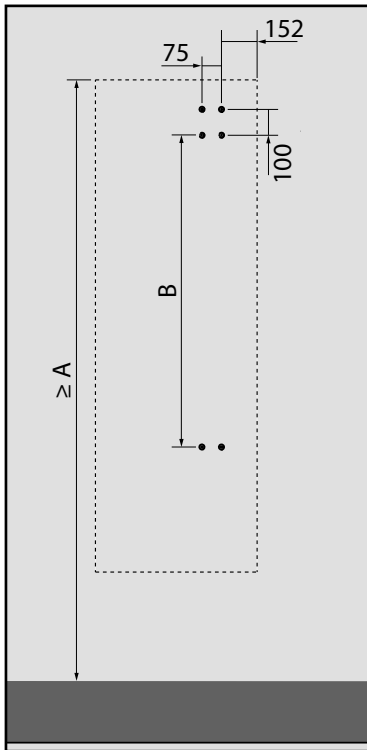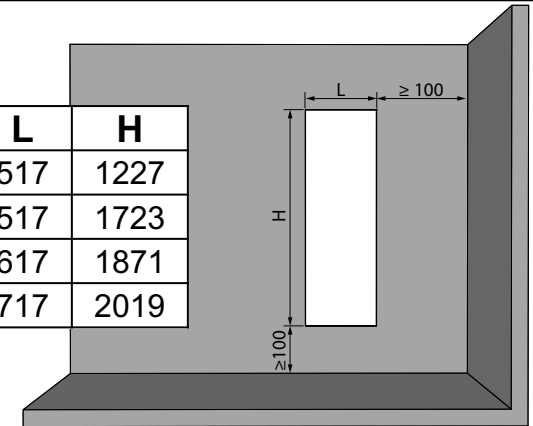

A	B	A	B
1327	517	1971	617
1823	517	2119	717

